

— ADHESIVES SINCE 1828 —



HARDWOOD FLOORING ADHESIVE

PUM-950 POWER-MASTIC®

- Moisture cured urethane adhesive
- Contains no isocyanates to etch finishes or harm installers
- NO MOISTURE TESTING REQUIRED (using #12 trowel)
- Has higher shear strength than competitors
- Contains no solvents
- Contains no VOC (calc. per CA Rule 1168)
- Certified "green"
- Freeze/thaw stable



ADHESIVES SINCE 1828



SMP-960 ONE-STEP

- NO MOISTURE TESTING REQIURED
- Provides sound barrier up to STC & IIC of 72 and 74 Db (Meets or exceeds all condo corporation requirements)
- Contains no isocyanates
- Contains no water
- Contains no solvents
- Contains no VOC
- Freeze/thaw stable
- Bridges cracks




ADHESIVES SINCE 1828 -



PUM-955 ULTRA-NAIL®

- Sausage pack to be used with sausage tool
- works like nails in a tube
- contains no isocyanates
- contains no water
- high shear strength
- Freeze/thaw stable
- contains no VOC



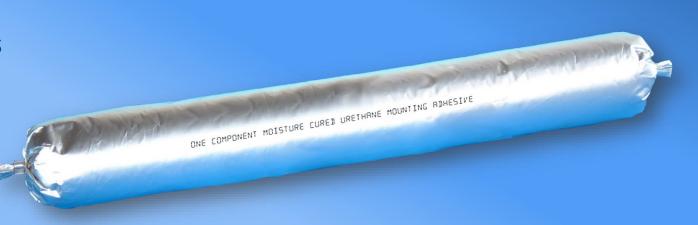





VINYL FLOORING ADHESIVE

LVP777

PRO-LUX

- For Wet lay or Dry-lay (Pressure sensitive adhesion)
- For use with all manufacture's products (Rubber sport floors are the exception)
- Can roll on for easy carpet tile instillation
- Flashes much faster that typical vinyl adhesives
- More than 2 times stronger than Typical vinyl adhesives
- UP to 250 SQ FT per gallon





D737 HIGHTACK

- For Wet lay or Dry-lay (Pressure sensitive adhesion)
- For use with all manufacture's products including rubber sport floors
- Can roll on for easy carpet tile instillation
- Flashes much faster that typical vinyl adhesives
- More than 4 times stronger than Typical vinyl adhesives
- UP to 350 SQ FT per gallon



ADHESIVES SINCE 1828





ADHESIVE PRIMER, MOUNTING ADHESIVE, WOOD FLOOR REPAIR KIT

AQP-200 AQUA-PRIME

- Certified "Green"
- Contains no solvents, no VOC
- Use prior to water based or moisture cured adhesives
- Use prior to cementitious or gypsum based leveling compounds
- Use over radiant heated subfloors
- Use over lightweight concrete or Gypcrete subfloors
- Promotes a strong bond



- ADHESIVES SINCE 1828



M400 ENDURA TAC

- Use with Hardwood, Ceramic, Stone, Cove base, All vinyl products, and Stair nosing's
- 10.3 oz tubes (30 in a case)
- Quick setting (30 minutes)
- ZERO VOS's
- Clean immediately with acetone
- Freeze thaw stable
- Moisture cured urethane



ADHESIVES SINCE 1828 -



IFK-100 INJECTION FLOOR REPAIR

The Injector Floor Repair Kit is designed to repair voids caused for various reasons. Some examples are:

- Uneven subfloors
- Improper curing of adhesive
- Open times prolonged
- Improper Trowel usage
- Water damage
- Dimensional stability of wood flooring



- ADHESIVES SINCE 1828



STAUF TECHNICAL REPRESENTATIVES

Brian Gamet

Northeast Regional Sales Director

(901) 606-9006 (cell)

brian.gamet@staufusa.com

Mark Long

Technical Director

(901) 866-458-3872

Mark.long@staufusa.com

Wayne Williams

Technical trainer

(901)930-5613

wayne.williams@staufusa.com

